« BIG BANG UNICO CHRONOGRAPH RETROGRADE » MODE D'EMPLOI





MOVEMENT & FUNCTIONS

INTRODUCTION

The UNICO Manufacture calibre – unique in the industry, with its column wheel and dual coupling on the dial side – was chosen to serve as the basis for the development of this watch, here embodying a very contemporary example of its extraordinary flexibility.

The fruit of 18 months of research and development, the new automatic HUB1261 manufacture movement has arrived: a bi-retrograde movement with central chrono comprising 385 components (Frequency 4 Hz, 28,800 Vib/Hour).

Obviously, time doesn't stop during a gripping football match. This is why the two permanently rotating hands are set in a counter at 6 o'clock. This way, they continue to display the passing hours and minutes while the seconds are shown by a small sector-shaped counter; this has a three-spoke hand positioned at 9 o'clock which rotates permanently and allows the wearer to see at a glance that the movement is working correctly. The power reserve is approximately 72 hours.



SETTING THE TIME

INTRODUCTION

This function enables you to set the time using the crown positioned at 3 o'clock.

OPERATION



- 1. Unscrew and pull the crown to *position 2* (time setting)
- 2. Turn the crown, preferably clockwise, to set your watch to the desired time
- 3. Push the crown back against the case to position 1 (winding) and screw down the crown

BI-RETROGRADE CHRONO FUNCTION

INTRODUCTION



When the chronograph is started, the chrono's second hand and minute hand move from left to right in a circular arc of 45 minutes (one half of a football match). The watch also indicates an area for 15 minutes' *«added time»* up to 60 minutes and a second area for 15 minutes' *«extra time»*.

There are two push-buttons on either side of the crown for START, STOP and RESET.

OPERATION



PRECAUTIONS FOR USE

- Do not press the push-button at 4 o'clock when timing, as this will reset the hands to zero, thereby losing a record of the time measured.
- Do not try to screw the crown back down when it is in the time setting position: the crown must be correctly returned to the winding position before being screwed down.
- To ensure that the watch keeps time in a constant and regular manner, it is recommended to press the chrono STOP push-button (at 2 o'clock) when the watch is not being worn or if the chrono function is not being used.
- In the reset to zero area, a slight offset of no more than one second between the two hands is tolerated, as the bi-retrograde chrono mechanism is in direct contact with the basic UNICO movement.
- In operation, the minute hand flyback may be actuated between the 59th minute plus 30 seconds and the 60th minute plus 30 seconds.

WARRANTY

The card at the end of your Hublot kit is an electronic warranty certificate, which contains your watch's identity code and also grants you privileged access to the Hublotista area available on the Hublot website (www.hublot.com). The card must be activated electronically, or completed and the Hublot stamp applied.

Each Hublot watch bears an individual identification number, which proves its authenticity. Your Hublot watch is guaranteed against all manufacturing defects for a period of two years from the date of purchase, provided that the watch was purchased from an approved Hublot retailer. However, this warranty does not cover damage resulting from inappropriate use or improper handling of the watch. For any repair during the warranty period, please enclose with the watch the pre-activated warranty card signed by an approved Hublot retailer, an exhaustive list of which can be found on our website.

Should the watch require any kind of servicing, please contact an approved Hubiot retailer or After-Sales service centre only, the contact details of which can be found on the Hubiot website. All repairs or servicing work carried out by third parties not authorised by Hubiot will automatically invalidate your warranty; in which case any damage would be rectified at your expense.

